



ORDERING INFORMATION

Hotfoil type HB Heating Modules

Individual HB Modules form part of an overall hopper heating system. For spares or replacements, the following procedures can be adopted.

Either


A) Consult the project design drawing and identify the HB heater reference (letter & number).

OR


B) Complete the following –

Build a heater by selecting appropriate code for each feature category. Example: **HB-2408-500-120-3-12-CC**

HB	24	08	500	120	3	12	CC
Heater Type	Length	Width	Watts	Volts	Lead Exit Point	Lead Length	Conduit Connector

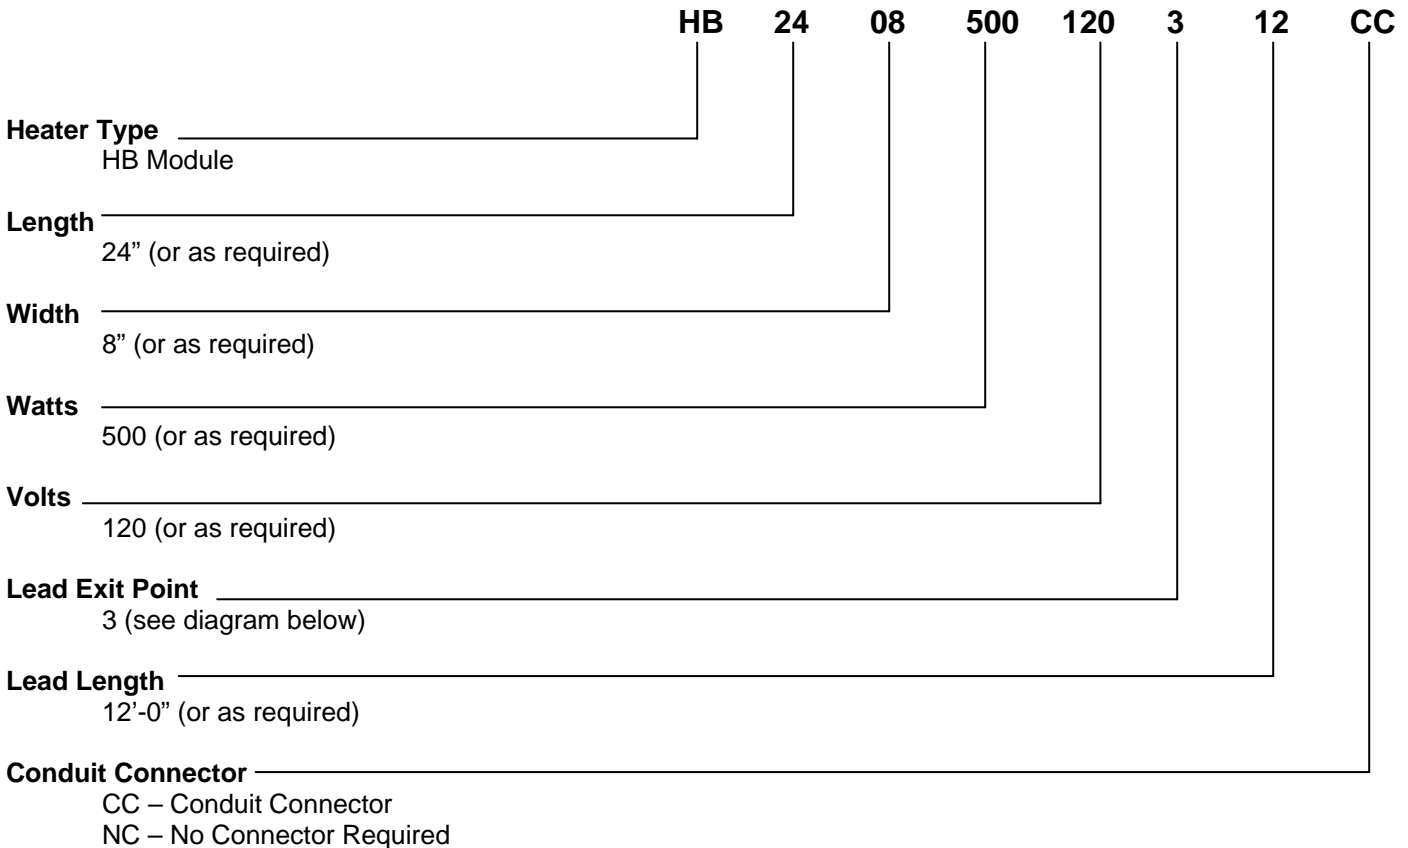

Lead Exit Point Diagram

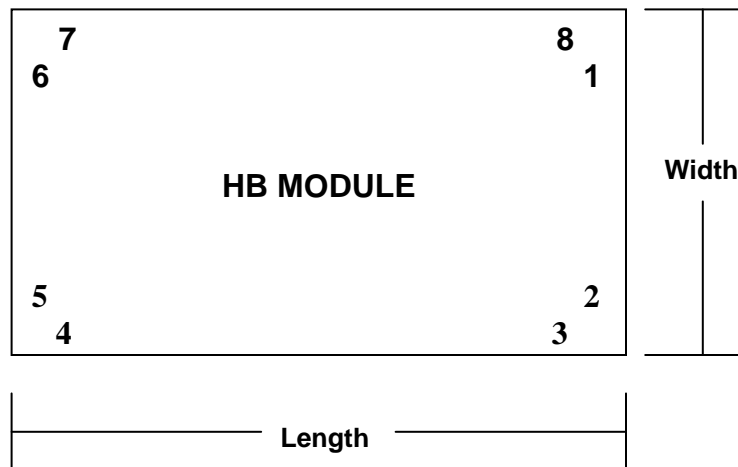

Note

On some projects, the HB Modules are required to have a flexible conduit over the leads for added mechanical protection. The conduit is 3/8". If conduit connectors are required, the notation "CC" is to be included in the heater description.

When trapezoidal modules are needed, the client should provide a sketch of the heater.

hotfoil®

Robbinsville, NJ 08691
Phone: 609.259.4118
Fax: 609.259.4119
<http://hotfoil.com>